


# Manual For 10 Dialing Button

Connecting diagram

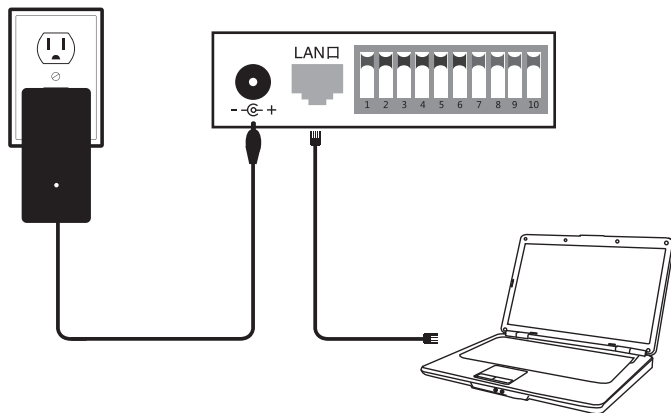


DC port -----> Connet with DC power

LAN port -----> Connect with PC(Switch or DVR)

NOTE:If you want to enter web page,you need manually bound  
IP address of PC.


## Connecting diagram

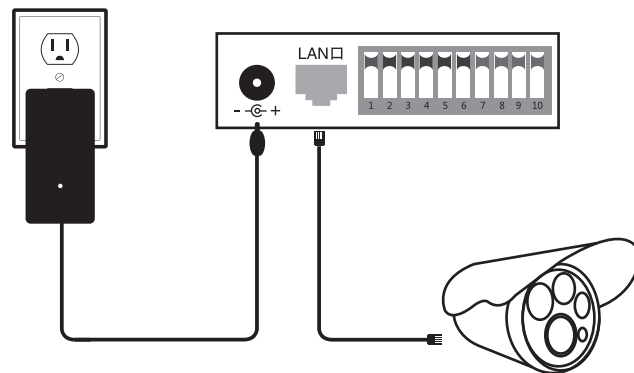

DC port -----> Connet with power

LAN port -----> Connect with camera

DIP device instructions

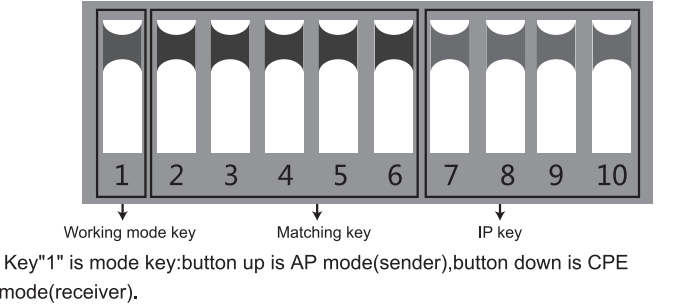

Key"23456" are matching keys:32 various combination be made of 5 keys,correspond 32 different SSID,and decide 32 different segment.

If button up denotes as 1,button down denotes as 0,dial-up "down up down down" can be denoted as "01100"(as the picture shows key "23456" can be recored as "11111")

As DIP to assign different wireless channels,there are 32 cases(as the form shows),all channels use 40M mode

Key"78910" are IP keys,means the last figure of CPE IP,applicable to point-to-multipoint mode(1 point to 16 points)

- Remarks:
- 1.Restart CPE after finishing DIP settings.
  - 2.SSID of DIP type CPE defaults not broadcast,passwords have been set up,no need set again.
  - 3.There are 32 segments and 544 IPs for DIP type CPE,please avoid these when you use cameras.

When no need management

As point-to-point for example:  
Just make sure two points match,and work good.


Case 1: Matching keys are "up up up up up",can be recored as "11111"



Case 2: Matching keys are "down up up up up",can be recored as "01111"




As point-to-multipoint (1 point to 4 points)  
for example:

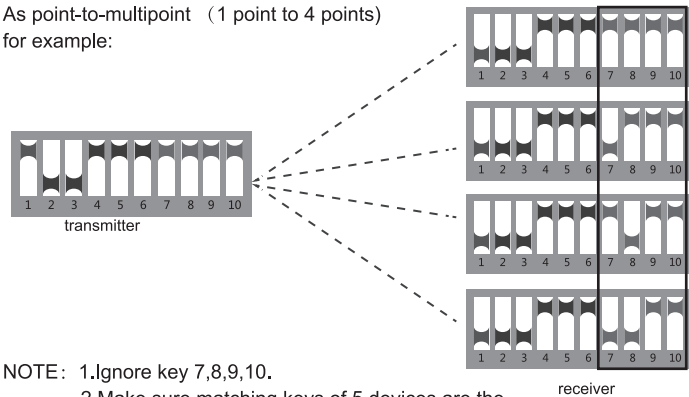

- NOTE:
- 1.Ignore key 7,8,9,10.
  - 2.Make sure matching keys of 5 devices are the same,then they can work well.


When need management,specific operations as below

Step 1 CPE settings

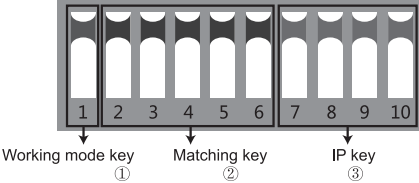


1.Working mode key:the first key used for mode selection.  
Key up is "AP mode",key down is "CPE mode"

2.Matching key: 5 keys can be set up to 32 different IP

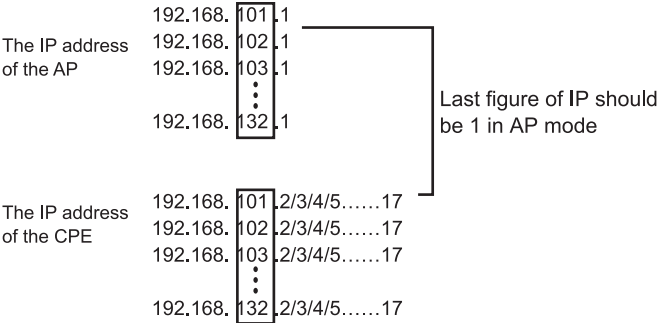





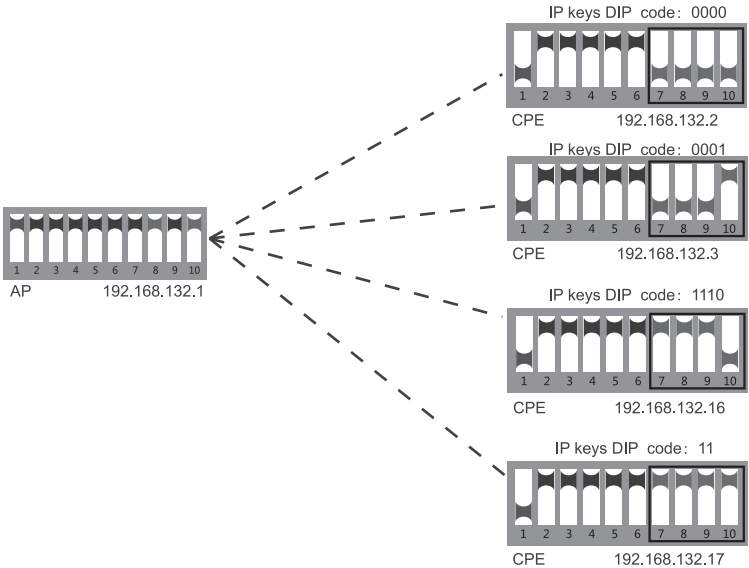











3.IP key:last 4 keys can be set up to 16 different IP addresses.For example

Point-to-multipoint, as the 32nd pair CPEs for a example:



16 groups of CPE:DIP codes for IP address specific as follows:


IP keys DIP code: 0000  CPE 192.168. *.2	IP keys DIP code: 0001  CPE 192.168. *.3	IP keys DIP code: 0010  CPE 192.168. *.4
IP keys DIP code: 0011  CPE 192.168. *.5	IP keys DIP code: 0100  CPE 192.168. *.6	IP keys DIP code: 0101  CPE 192.168. *.7
IP keys DIP code: 0110  CPE 192.168. *.8	IP keys DIP code: 0111  CPE 192.168. *.9	IP keys DIP code: 1000  CPE 192.168. *.10
IP keys DIP code: 1001  CPE 192.168. *.11	IP keys DIP code: 1010  CPE 192.168. *.12	IP keys DIP code: 1011  CPE 192.168. *.13
IP keys DIP code: 1100  CPE 192.168. *.14	IP keys DIP code: 1101  CPE 192.168. *.15	IP keys DIP code: 1110  CPE 192.168. *.16
IP keys DIP code: 1111  CPE 192.168. *.17		

Note: In the local Network with one sender multi receivers, every device must be set up to different IP

► Step 2 PC settings





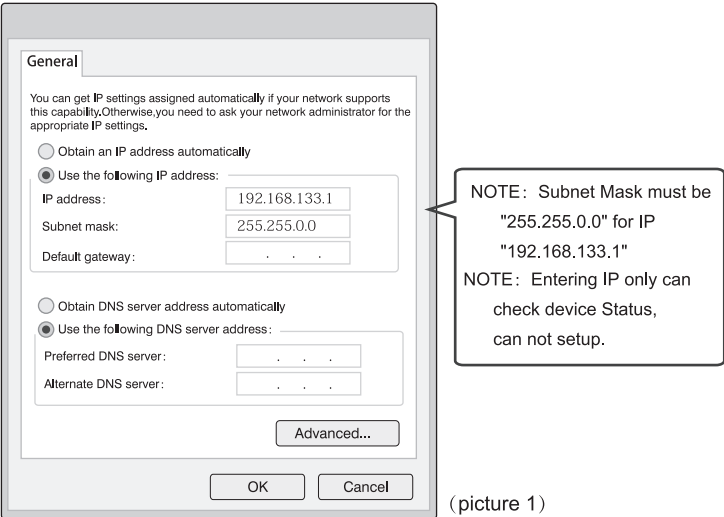











Manually setting static IP address, as picture 1 shows (type the ip of corresponding device in IE)

















Internet Protocol (TCP/IP) Properties



(picture 1)

32 pair DIP codes,segment and frequency refer to the following chart:

Group	2–6 Dial	Correspond IP segment	2.4GHZ	5.8GHZ
1st		192.168.101.X	2.372G	4.96G
2nd		192.168.102.X	2.377G	4.98G
3rd		192.168.103.X	2.382G	5.0G
4th		192.168.104.X	2.387G	5.02G
5th		192.168.105.X	2.392G	5.04G
6th		192.168.106.X	2.397G	5.06G
7th		192.168.107.X	2.402G	5.08G
8th		192.168.108.X	2.412G	5.10G
9th		192.168.109.X	2.417G	5.12G
10th		192.168.110.X	2.422G	5.14G
11th		192.168.111.X	2.427G	5.16G
12th		192.168.112.X	2.432G	5.18G
13th		192.168.113.X	2.437G	5.2G
14th		192.168.114.X	2.442G	5.22G
15th		192.168.115.X	2.447G	5.24G
16th		192.168.116.X	2.452G	5.745G

Group	2–6 Dial	Correspond IP segment	2.4GHz	5.8GHz
17th		192.168.117.X	2.457G	5.765G
18th		192.168.118.X	2.462G	5.785G
19th		192.168.119.X	2.467G	5.805G
20th		192.168.120.X	2.472G	5.825G
21st		192.168.121.X	2.492G	5.845G
22nd		192.168.122.X	2.512G	5.865G
23rd		192.168.123.X	2.532G	5.885G
24th		192.168.124.X	2.367G	5.905G
25th		192.168.125.X	2.362G	5.925G
26th		192.168.126.X	2.357G	5.945G
27th		192.168.127.X	2.352G	5.965G
28th		192.168.128.X	2.382G	5.985G
29th		192.168.129.X	2.392G	6.005G
30th		192.168.130.X	2.397G	6.025G
31st		192.168.131.X	2.512G	6.045G
32nd		192.168.132.X	2.532G	6.065G

Note:The mark is standar frequency, the other is Spread Spectrum Frequency.

Q1. What should be noted when DIP?

Must be powered off before DIP

Q2.How dose CPE get the power without power supply?

We use POE power,CPE get the power via cable.User need use 2 cables to connect and setting(better use Super five types copper cable with shielding net)POE manual can refer to cover connecting picture,but please remember connect with LAN port(black port),not the yellow one

Q3. How long the POE cable can be?

The length of cable depends on power voltage and cable quality.If you use 12v power, cable can be 10-20m. If you use 24v power,cable can be over 20m.Cable must be Super five types copper cable with shielding net(Better quality can be 50m)

Q4. How to reset CPE?

Get device power on,long press RESET button(about 7 seconds),device reboot.

Q5. Why local Area Connection is on and off after installed device?

Detection method as below:

- ①Try to change 1m cable,make sure it is not quality of cable problem.
- ②Try to change channels,avoid signal quality problem cause disturbance.

Q6.How to view the monitor screen when the camera IP address to be searched?

Conect the NVR with bridge for yellow ports.

Q7.Light of signal

Red:PWR:power light showing the normal working status.

Blue:WLAN:wifi singal light the strobe light show the normal working status.

WAN,LAN:LAN light showing the normal working stats.

Orange:1-4 Signal.Strenght Indicator

Light 1,The signal is too weak.

Light 1.2, The signal is weak.

Light 1.2.3,The signal is general.

Light 4,The signal is too strong.

Light1.2.3.4,The best signal.

Q8.How to login the firmware with DIP product?

1.IP address:192.168.133.1 , subnet mark :255 255.0.0

2.DIP devices refer to the IP address of the conrresponding manual.

Note:The mark is standar frequency, the other is Spread Spectrum Frequency.